


Wall-mount cabinet door reversal instructions

To reverse the swing on a cabinet door, you will require the following:


1. A set of Right-Hand hinges (Hinge, 96-10-520-50)
2. Flat or #2 Roberston screwdriver
3. A 9/16" open-faced hex wrench or hex socket

To obtain an extra set of hinges, contact your local CableTalk dealer

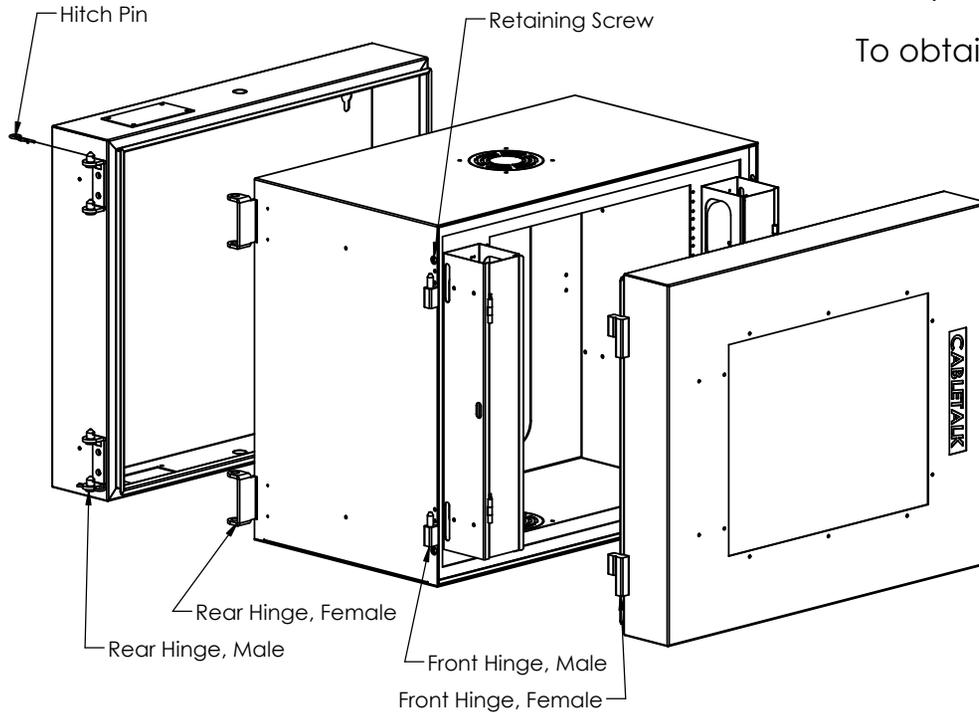



Step 1: Separating the body components

- A. Open front door
- B. Remove retaining screw above top hinge
- C. Lift front door off its hinges
- D. Remove the hitch pins from the rear hinges and lift the mid-body off the hinges

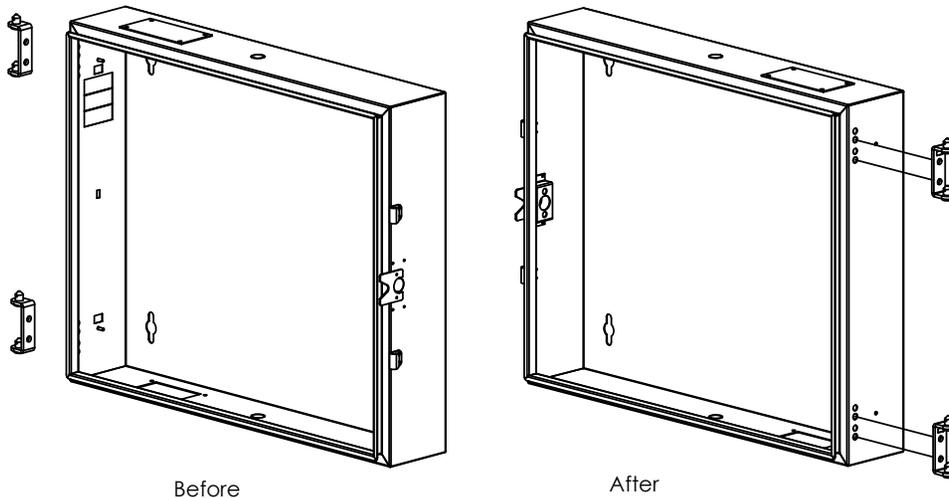



Step 2: Rear body

- A. Turn rear body over so hinges are on the opposite side
- B. From the inside, remove male rear hinges with a 9/16" hex wrench or socket, then re-mount them with the clevis pin facing upwards, using the bottom set of mounting holes
- C. Re-mount the rear body to the wall. Male hinges should now be correctly pointing upwards

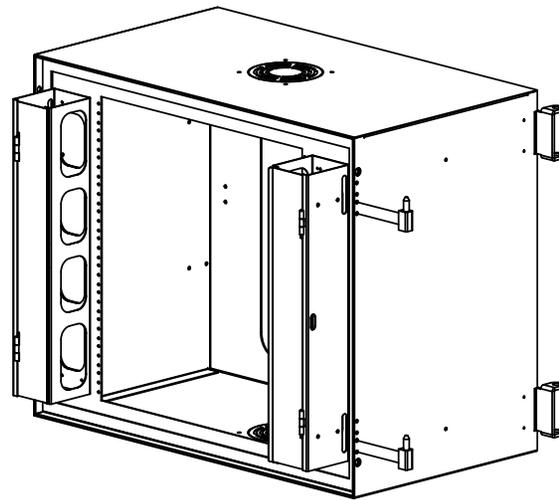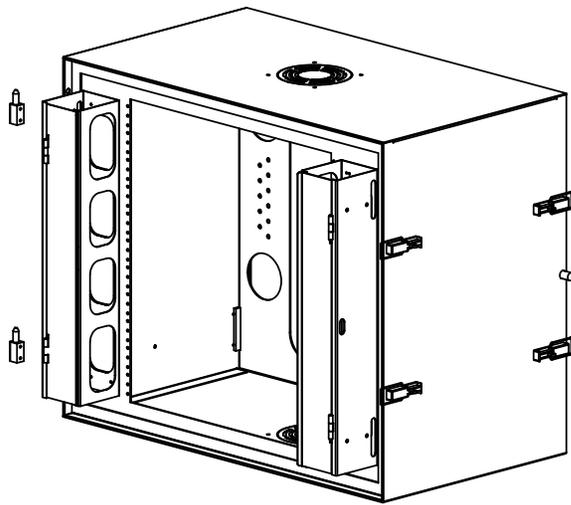


Step 3: Mid-body

- A. Turn mid-body over so hinges are on the opposite side
- B. Remove male front hinges from inside and re-mount them with the pin facing upwards, using the bottom set of mounting holes
- C. Male hinges should now be correctly pointing upwards
- D. Drop the mid-body onto the male rear hinge on the rear body. Replace the hitch pins to secure the hinges

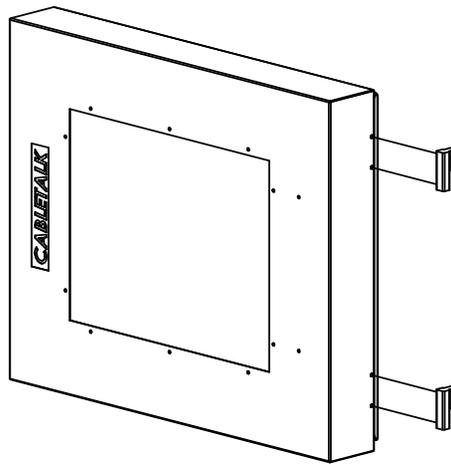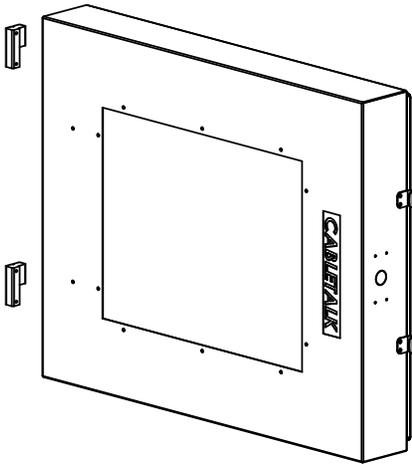

Step 4: Front Door

- A. Turn front door over so hinges are on the opposite side
- B. Remove Left Hand female front hinges from inside and mount Right Hand female hinges with the hole facing downwards
- C. Drop door onto male front hinges on the mid-body
- D. Replace the retaining screw above the top front hinge to secure the door in place

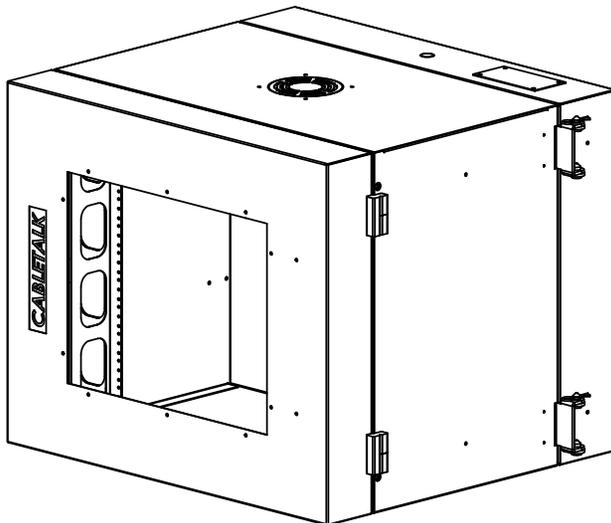

Wall-mount cabinet
with right-hand hinges