
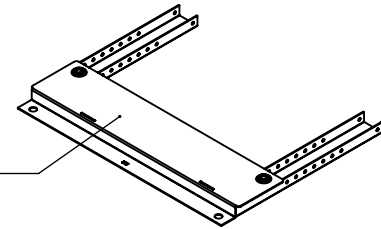
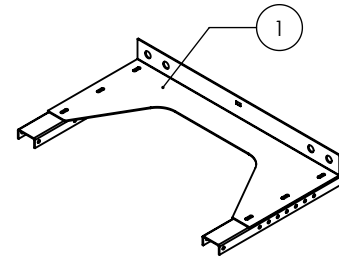
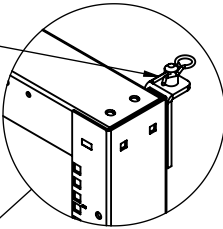


SWINGOUT RACK INSTALLATION INSTRUCTIONS


STEP 1

PRE-DETERMINE WHICH SIDE IS TO SWING PRIOR TO ASSEMBLING PIN. FASTEN PIN TO OPPOSITE SIDE OF CAGE NUT SLOT. ENSURE BOTH HINGES ARE ATTACHED TO THE SAME SIDE. SHOWN AS RIGHT HAND SWING




RD ROB CMB 10-32X1/2L(1PER)
NYLOK NUT 10-32(1PER)

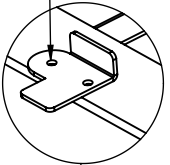

HEX BOLT 1/4-20X3/4"L(2PER)
NYLOK NUT 1/4-20(2PER)

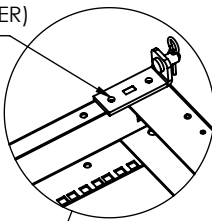

2

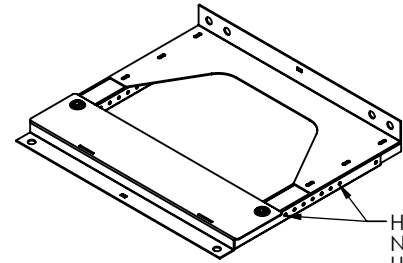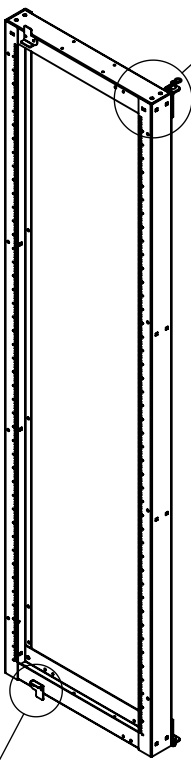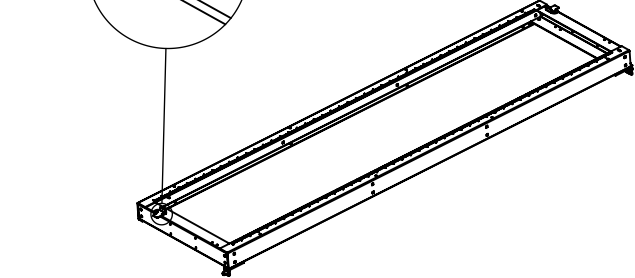


HEX BOLT 1/4-20X2.5"L(2PER)
NYLOK 1/4-20(2PER)
USE MAX HOLE SPACING FOR STABILITY
(SEE SHEET2, STEP 2)

DETAIL A (2 PER)



STEP 2

LATCHES FASTEN TO SAME SIDE AS CAGE NUT SLOT TOP & BOTTOM

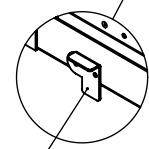


STEP 6

INSERT SAFETY PIN AS SHOWN TOP & BTM. PLIERS MAY BE REQUIRED TO INSTALL/REMOVE (RAIL NOT SHOWN FOR CLARITY)

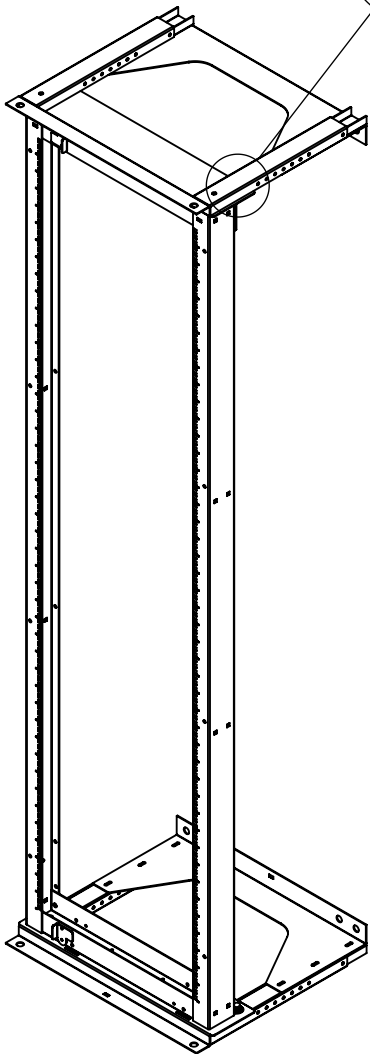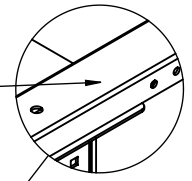



STEP 5 (OPTIONAL)

DRILL 1/2" LAG BOLT. ANCHOR TO FLOOR. ADJUST RACK DEPTH PRIOR DRILLING (HWD NOT PROVIDED)

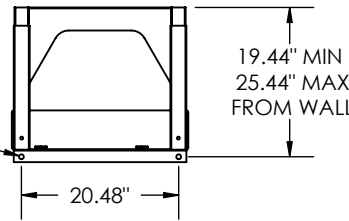

STEP 4


SET DEPTH TO SUIT INSTALLATION. TOP AND BOTTOM SUPPORTS MUST BE IN SAME POSITION. SEE DETAIL A IN SHT.1

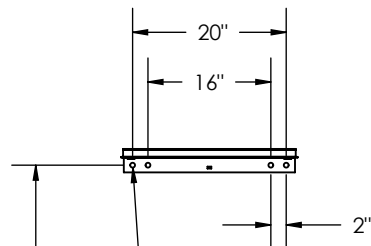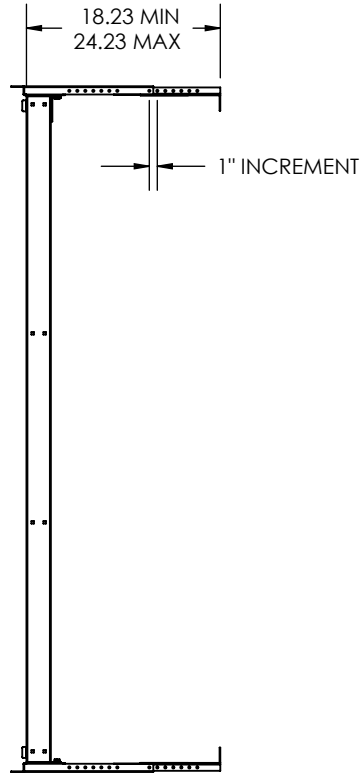

81 1/2"

STEP 3

DRILL & FASTEN 1/2" BOLTS TO WALL, 2 PER MIN. ATTACH BOTTOM FIRST. ALL DISTANCES INDICATED ARE FROM CENTRE TO CENTRE OF HOLES. (HWD. NOT PROVIDED)



2 1/8" FROM FLOOR

RACK OMITTED FOR CLARITY

